


- 1 – Button for program choose
- 2 – button for special function of degreasing speed of centrifuge
- 3 – Button for temperature
- 4 – Display
- 5 – Button for start delay
- 6 – Button for time management
- 7 – button for start/stop washing

- 8 – Button for easy ironing
- 9 – Button for additional softness
- 10 – Button for additional washing
- 11 – Button extra dirty
- 12 – Button for pre-washing
- 13 – Button for turn-on/turn-off wash machine

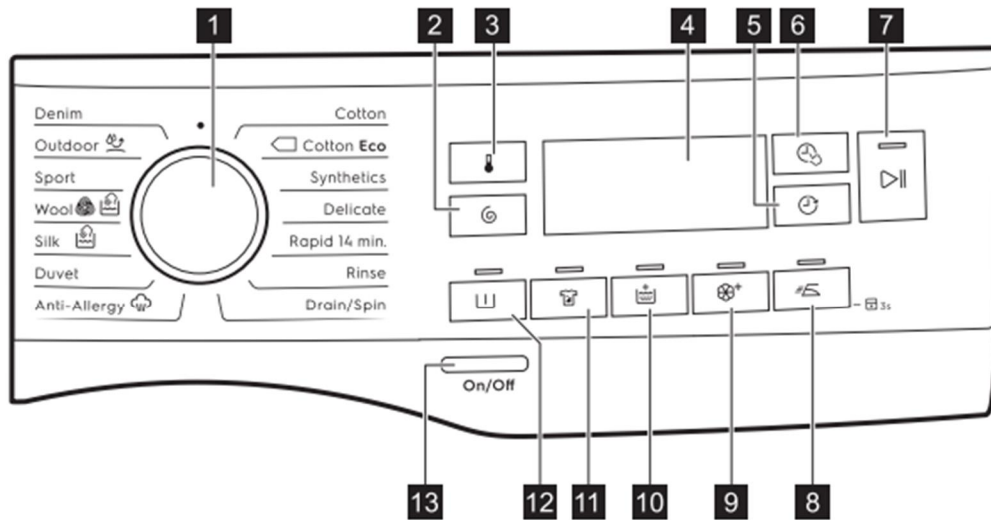

- 1** Gumb za izbiro programa
- 2** Tipka za funkcije znižanja hitrosti ožemanja
- 3** Tipka za temperaturo
- 4** Prikazovalnik
- 5** Tipka za zamik vklopa
- 6** Tipka za upravljanje časa
- 7** Tipka za vklop/prekinitvev

- 8** Tipka za lažje likanje
- 9** Tipka za dodatno mehko
- 10** Tipka za dodatno izpiranje
- 11** Tipka Madeži
- 12** Tipka za predpranje
- 13** Tipka za vklop/izklop